


# WobL™

"The World's Smallest Vibrating Watch"

## Instructions

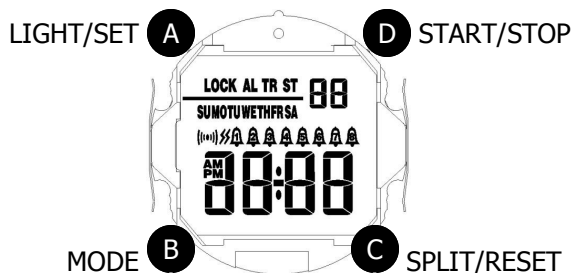


### Watch Functions

Time display in month, day, date, hour, minute, second  
8 sound or vibration alarms (each alarm is 15 seconds)  
Stopwatch (chronograph) 1/110 second  
Countdown timer (range 30 min. to 24 hr.)  
Time limit - Set the time range for alarms in Military time  
Lock function - Lock buttons to prevent accidental re-programming  
12/24 hour display  
Display light

### Function Modes

Press Mode Button (B) to Cycle Through Each Mode

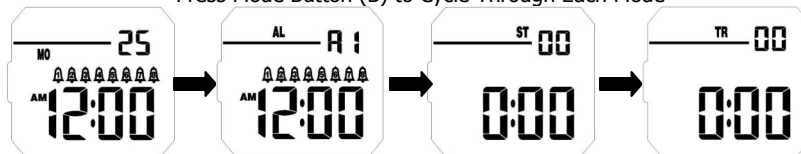

\*Time Mode\*

\*Alarm Mode\*

\*Stopwatch Mode\*

\*Timer Mode\*

TIME LIMITS ARE IN MILITARY TIME



NOT WATERPROOF

### To Set Time, Date, & Month

Press B - To advance to \*Time Mode\*  
Press and hold A until the seconds flash  
Press B - Minutes will be flashing  
Press D - To advance the minutes  
Press B - Hour will be flashing  
Press D - To advance hour  
Press B - Date will be flashing  
Press D - To advance date  
Press B - Month will be flashing  
Press D to advance month  
Press B - Year will be flashing  
Press D to advance year  
Press A to confirm time and date settings

Press D to change 12/24 hour display

Press C to display the date

### To Set Alarm/Vibration

Press B - To advance to \*Alarm Mode\*  
Press D - To turn on the alarm or vibration  
When sound alarm is on (■■■■) will display  
When vibration is on <math>v</math> will display

\*\*Vibration **AND** alarm cannot be turned on at the same time.

Each vibration or alarm is 15 seconds.

### To Set 8 Individual Alarms

Press B - To advance to \*Alarm Mode\*  
Each alarm is numbered A1-A8  
To set Alarm 1, press and hold A until hour flashes  
Press D to advance the hour  
Press B - Minutes will be flashing  
Press D to advance the minutes  
Press A to confirm the time entered



Will appear to show the alarm has been set

Press C to select alarm A1-A8  
Continue above steps to set additional alarms  
Press B - To return to \*Time Mode\*

### To Set Countdown Timer

Press B - To advance to \*Timer Mode\*  
To set time limit (ex. Alarm from 0700 to 2000)  
Press A and hold until starting hour flashes  
Press D to advance the hour  
Press B - Ending hour will be flashing  
Press D to advance the hour  
To set time interval (ex. Alarm every hour or every 2 hours)  
Press B - Hour will be flashing  
Press D to advance the hour  
Press B - Minutes will be flashing  
Press D to advance the minutes  
Press A to confirm the timer setting  
Press D to start the countdown timer  
Press B to return to \*Time Mode\*  
To Stop countdown timer - Press D

Must restart timer daily when using time limits


### To Lock Buttons

Press B - To advance to \*Time Mode\*  
Press B and C together at the same time to lock the buttons  
"Lock" icon will appear  
When buttons are locked only light button will be working  
Press B and C together at the same time to remove the lock-out feature ("lock" icon will disappear)

### To Set Stopwatch

Press B - To advance to \*Stopwatch Mode\*  
Press D - To start the stopwatch  
Press D again to stop  
Press C to return to zero

### To Erase An Alarm

Press B to advance to \*Alarm Mode\*  
Press C until you get to specific alarm you want to erase  
Press and hold C until  disappears  
Press B to return to \*Time Mode\*

